



## Operating Instructions

# 70079 Praetor B

## 1 Important Instructions



- The locking mechanism works smoothly. No force should be applied. This should be particularly avoided when inserting the key in the lock.
- Opening the lock with a damaged key can result in damage to the lock.
- The function of the lock could not be secured, if you use damaged or heavily worn out keys. We recommend to check the condition of the keys before using them and to not use or, if necessary, to change the keys, if they are damaged or heavily worn out.
- The lock must not be lubricated.
- The lock may only be installed by specialist personnel and only opened by the manufacturers. Unauthorised opening will lead to invalidation of any guarantee claims.
- Only original Kaba Mauer keys are to be used should additional keys be required, as otherwise no guarantee claims may be raised.


## 2 Opening

- Insert key in the keyhole as specified in the table below and turn in the appropriate direction until stop position is reached (approx. 150°).

Lock Installation Position	Key Insertion Position	Direction of Turn
Bolt left, keyhole horizontal	Long bit left	Clockwise
Bolt down, keyhole vertical	Long bit down	Clockwise
*Bolt right, keyhole horizontal	Long bit right	Anti-clockwise
Bolt up, keyhole vertical	Long bit up	Clockwise

\* Notice: Lock position "bolt right" only possible in connection with the option "SLG"!

Diagram 1: Key

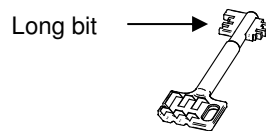

- The key cannot be removed when the lock is open.

## 3 Locking

- Turn the key back to the original position.
- The key is to be removed after locking and kept in a safe place where it is not accessible to unauthorised persons.

Should you have any questions regarding our products, please contact your safe manufacturers/specialist dealers.