

71111 President A – 71113 President

1 Important Instructions



- The locking mechanism works smoothly. No force should be applied. This should be particularly avoided when inserting the key in the lock.
- Opening the lock with a damaged key can result in damage to the lock.
- The lock must not be lubricated.
- The lock may only be installed by specialist personnel and only opened by the manufacturers. Unauthorised opening will lead to invalidation of any guarantee claims.
- Only original Kaba Mauer keys are to be used should additional keys be required, as otherwise no guarantee claims may be raised.


2 Opening

- Insert the key in the keyhole as specified in the table below and turn in the appropriate direction until the stop position is reached (approx. 150°).
- Version "71113 removable": Turn the key until 180°.

Lock Installation Position	Key Insertion Position	Direction of Turn
Bolt left, keyhole horizontal	Long bit left	Clockwise
Bolt down, keyhole vertical	Long bit down	Clockwise
*Bolt right, keyhole horizontal	Long bit right	Anti-clockwise
Bolt up, keyhole vertical	Long bit up	Clockwise

* Notice: Lock position "bolt right" only possible in connection with the option "SLG"!

Diagram 1: Key

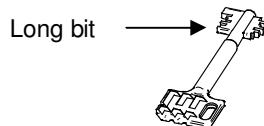

- The key cannot be removed when the lock is open.
- The version "71113 removable" is not a certified product. If the lock is open, the key can be removed.

3 Locking

- Turn the key back to the original position.
- The key is to be removed after locking and kept in a safe place where it is not accessible to unauthorised persons.

Should you have any questions regarding our products, please contact your safe manufacturers/specialist dealers.

